


SONY®

BATTERY ADAPTOR

BKP-L551

MAINTENANCE MANUAL
1st Edition

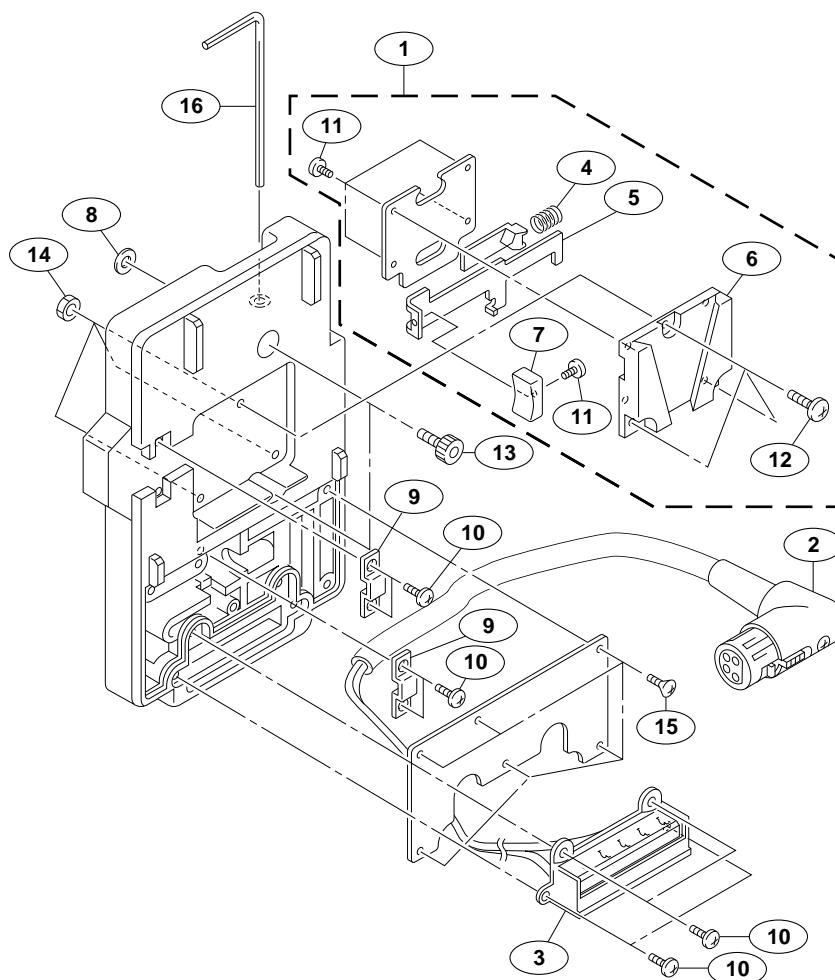

Battery Adaptor

No.	Part No.	SP Description
1	A-8278-025-C	s MOUNT,V ASSY
2	1-557-553-11	s CORD (WITH ROUND CONNECTOR) 4P
3	1-766-377-12	s CONNECTOR, BATTERY
4	3-679-648-02	o SPRING, COMPRESSION
5	3-679-688-02	o LEVER, RELEASE
6	3-679-690-02	o MOUNT, V
7	3-680-952-01	o KNOB, RELEASE LEVER
8	3-687-116-01	o WASHER (4), STOPPER
9	3-697-119-01	o RETAINER
10	3-906-376-01	s SCREW (2.6X6)
11	7-627-553-38	s SCREW, PRECISION +P 2X3
12	7-682-549-09	s SCREW +B 3X10
13	7-683-421-04	o BOLT, HEXAGON SOCKET 4X12
14	7-684-023-04	s N 3, TYPE 2
15	7-685-204-19	s SCREW +KTP 2X6 TYPE2 NON-SLIT
16	7-721-140-60	s WRENCH, L (3.0MM)

Supplied Accessories

Qt'y	Part No.	SP Description
1pc	A-7612-224-A	o TABLE ASSY, BATTERY
3pcs	7-683-418-04	s BOLT, HEXAGON SOCKET 4X6
2pcs	7-683-423-04	s BOLT, HEXAGON SOCKET 4X16

Note

Parts marked with "o" at SP(Supply Code) column of the spare parts list may be not stocked. Therefore, the delivery date will be delayed.